


Working step of using Torque install roof rail

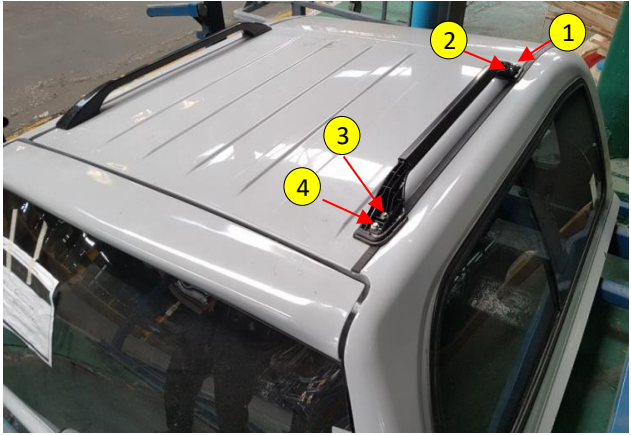

STEP 1 :	POINT			
	1	2	3	4
Torque force	4-5 Nm.	4-5 Nm.	4-5 Nm.	4-5 Nm.



STEP 2 :	POINT			
	4	3	2	1
Torque force	6-9 Nm.	6-9 Nm.	6-9 Nm.	6-9 Nm.



