




WIRING INSTRUCTIONS


SMM Steel Canopy V4 MITSUBISHI TRITON MQ 2015+



FUNCTION	CANOPY WIRING	VEHICLE WIRING
Constant Power(Dome Light)	Red	Red
Rear Demister	Yellow/Red	Black/Brown
Central Locking(Lock)	Blue	Blue
Central Locking(Unlock)	Green	Blue/Black
Earth	Black	Body of the car (Earth)
Brake Light	Red	Green/Yellow (Plug A)
Earth	Black	Black (Plug A)

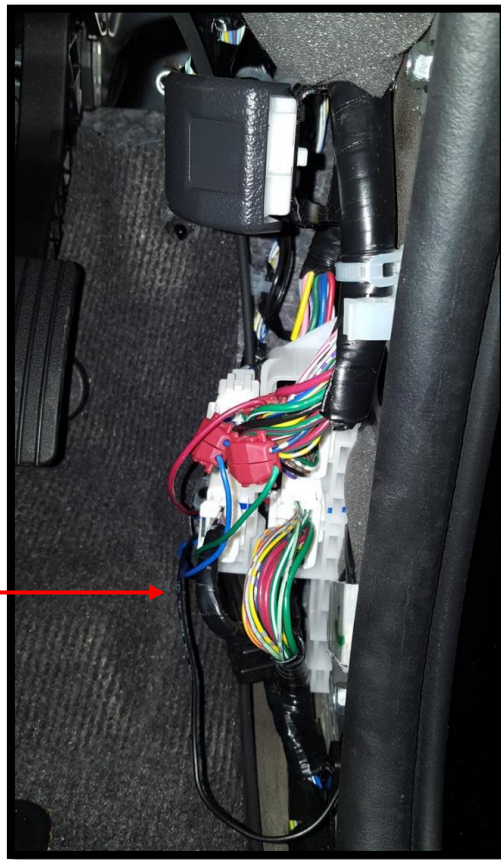

- Wires are at the front of the vehicle on the driver's side behind the kick panel
- Plug A is behind the rear tail light
- The demister wire is under the floor kick panel next to rear passenger seat

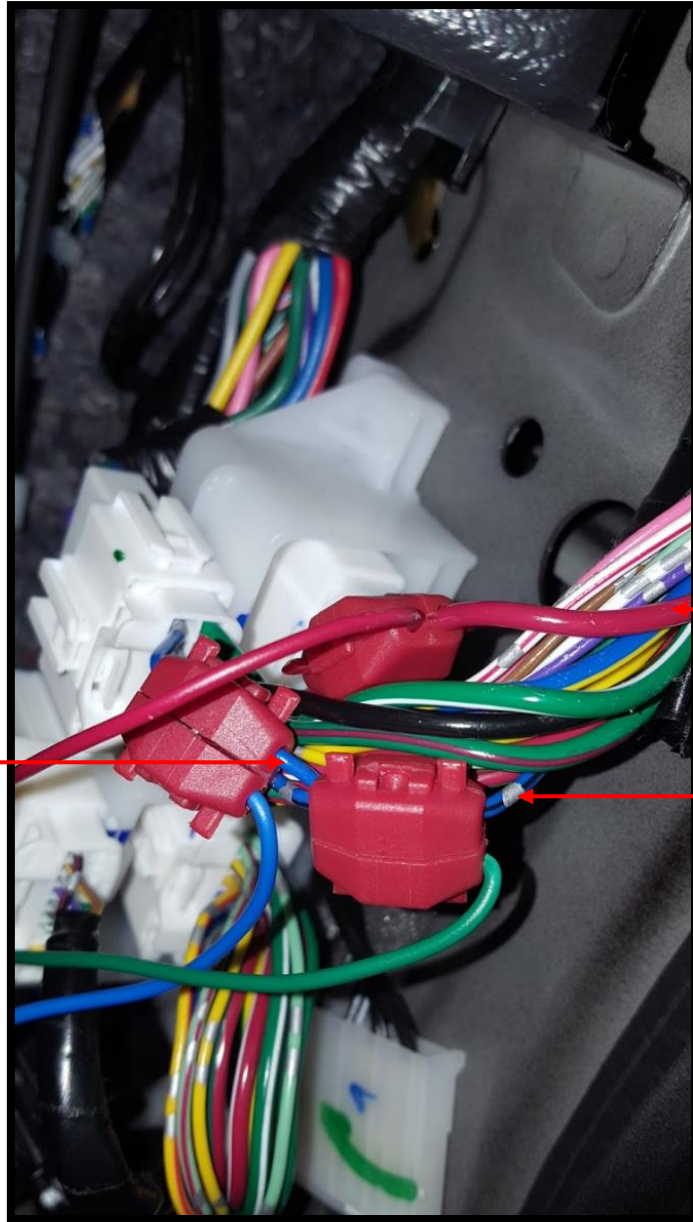


Blue to Blue (Central Locking- Lock)

Green to Blue/Black (Central Locking- Unlock)

Red to Red (Constant Power-Dome light)


Black to Body of the car (Earth)

Connections under rear LHS floor kick panel

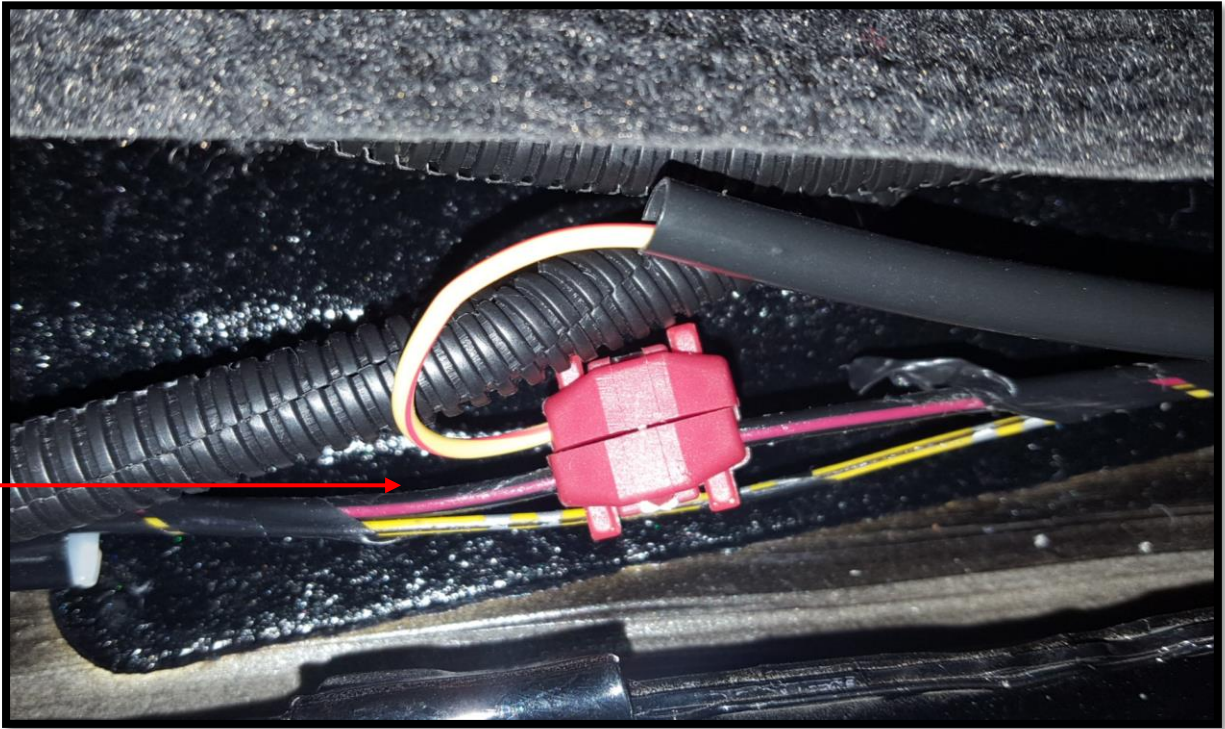

Yellow/Red to Black/Brown (Rear Demister)

Plug A

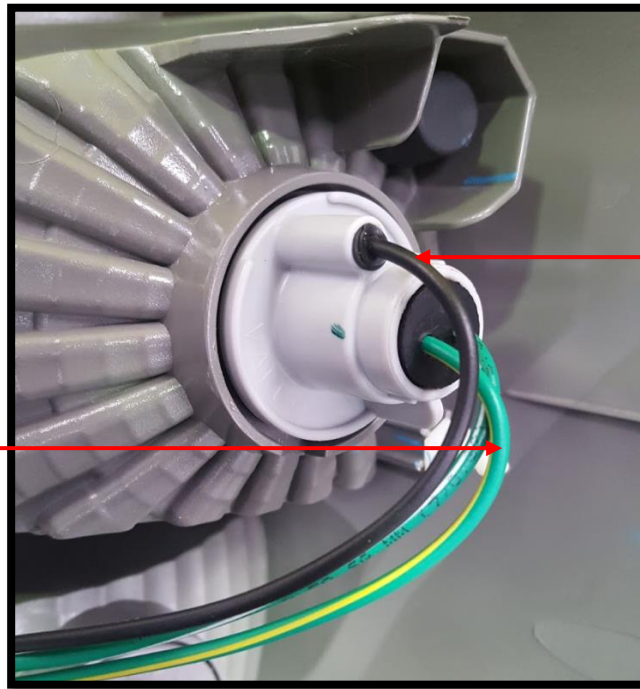

Red to Green/Yellow (Brake Light)

Black to Black (Earth)

Running the loom

You will find an opening with a grommet sealing it under the rear LHS seat to run the loom out under the vehicle. Then run the loom to the rear of the vehicle behind the tail light.



PLEASE NOTE

- Avoid drilling holes in the vehicle. There are always openings into the cabin underneath the vehicle or at the rear.
- Using a L.E.D test light, test all electrical components of the vehicle before and after wiring the canopy to ensure that everything works correctly.
- Ensure you replace all vehicle trim and return the vehicle interior back to how it was found.