



WIRING INSTRUCTIONS

SMM Steel Canopy V4


Nissan Navara D40 2005-2015




FUNCTION	CANOPY WIRING	VEHICLE WIRING
Constant Power(Dome Light)	Red	Sky Blue (Plug A)
Rear Demister	Yellow/Red	Green (Plug C)
Central Locking(Lock)	Blue	Blue (Plug B)
Central Locking(Unlock)	Green	White (Plug B)
Earth	Black	Car body
Brake Light	Red	Green/Yellow (Plug D)
Earth	Black	Black/ White (Plug D)

Plugs A, B, C are located at the front of the vehicle on the driver side behind the kick panel.

Plug D is located behind the tail light on the passenger's side.

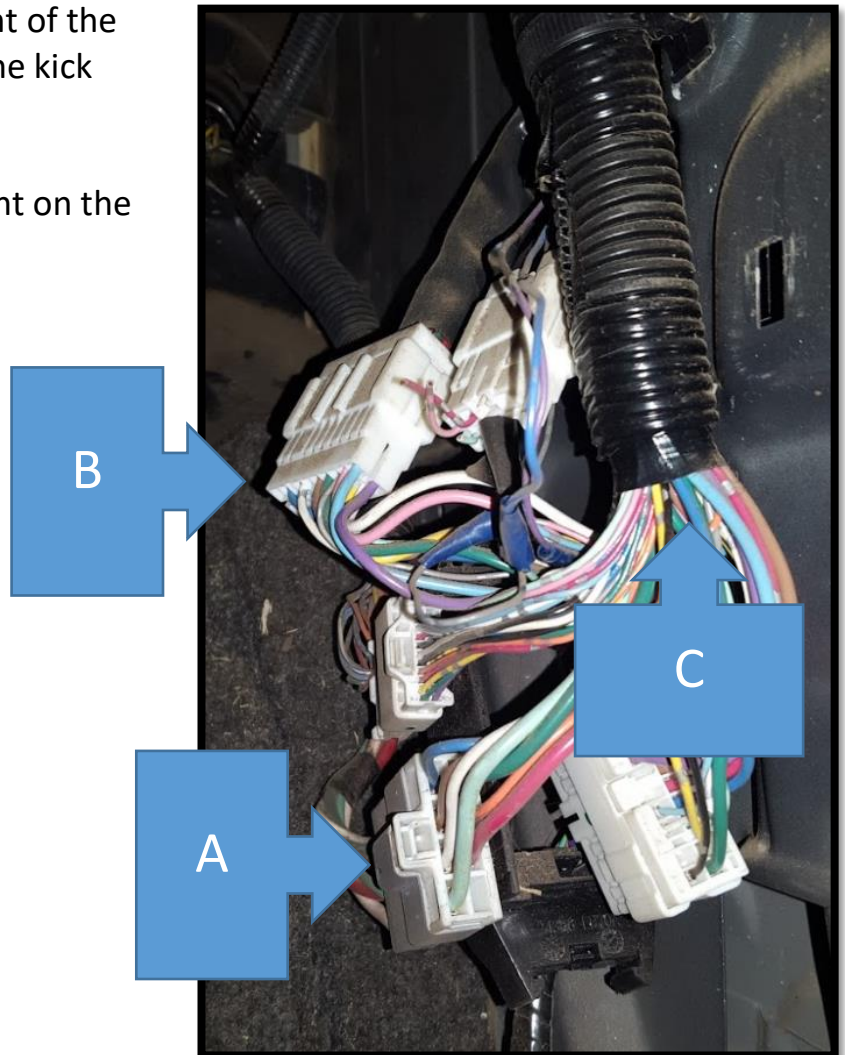


Plug A

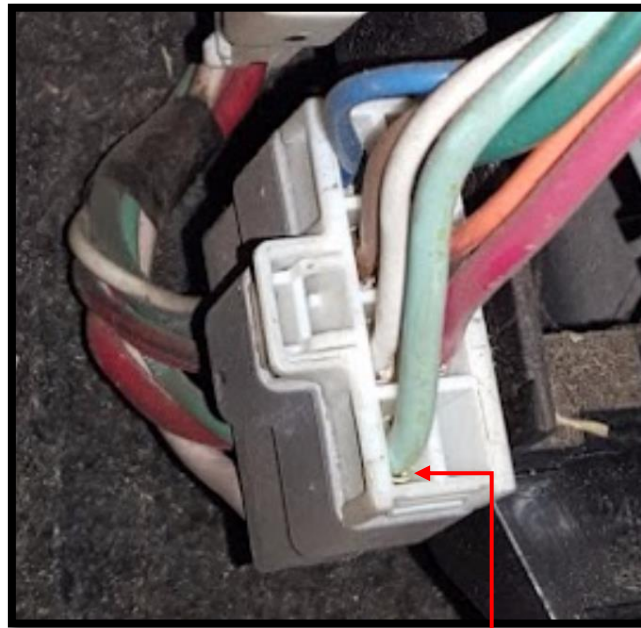

Red to Sky Blue (Constant Power-Dome light)

Black to Car Body (Earth)


Plug B

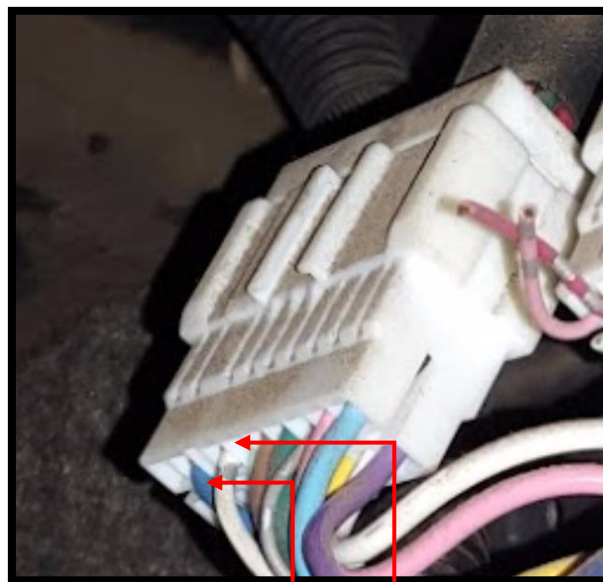

Blue to Blue (Central Locking- Lock)


Green to White (Central Locking- Unlock)

Plug C

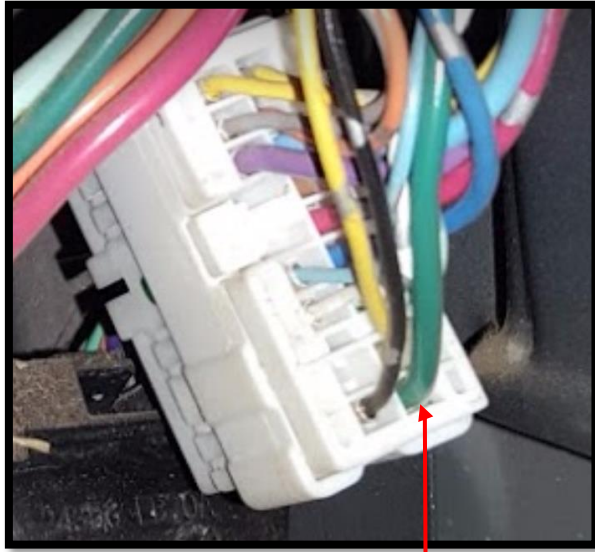

Yellow/Red to Green (Rear Demister) ←

Plug D

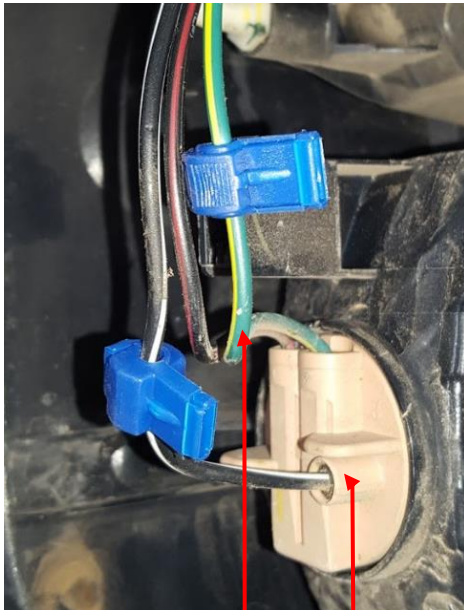

Red to Green/Yellow (Brake Light) ←

Black (Earth) to White/Black ←

Running the loom.

You will find an opening with a grommet sealing it under the passenger seat to run the loom out under the vehicle. Then run the loom to the rear of the vehicle behind the tail light.



PLEASE NOTE

- Avoid drilling holes in the vehicle. There are always openings into the cabin underneath the vehicle or at the rear.
- Using a L.E.D test light, test all electrical components of the vehicle before and after wiring the canopy to ensure that everything works correctly.
- Ensure you replace all vehicle trim and return the vehicle interior back to how it was found.