
SMM FI-003 (ver. 3)

Central Locking Installation (V2)




Central locking set contains:

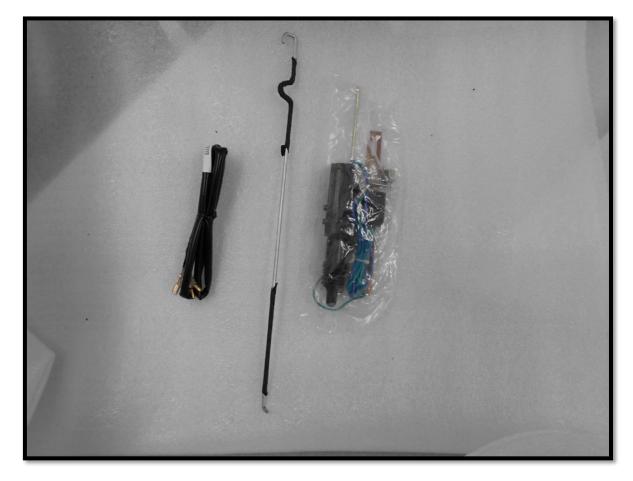

Installation:


1. Drill two holes as showed in the picture. One of them in rear door, next one in the canopy.

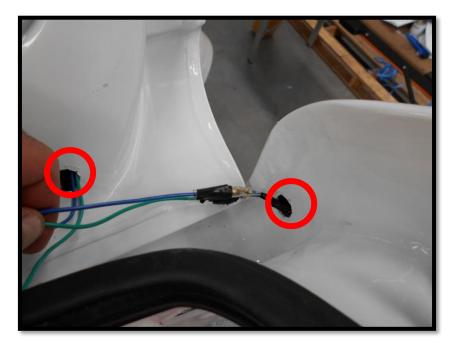

2. Use the paint included in the box to secure drilled places.




3. Use tape to pass the cable through the channel from top to bottom.

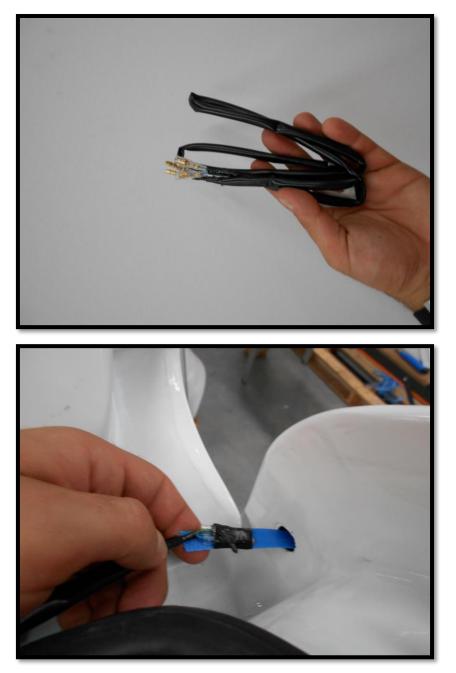





4. Remove the plate from rear door by unscrewing the three screws.

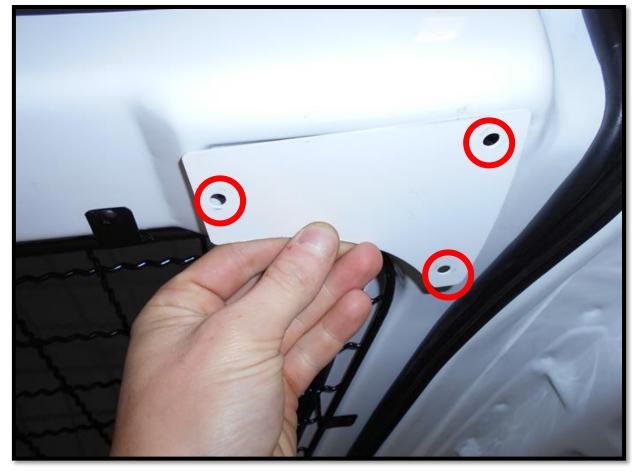



5. Using the tape pass the cable through the channel from top to bottom of rear door.




6. Put a rubber casing on the cables and connect them.







7. Connect the rubber to rear door of canopy.

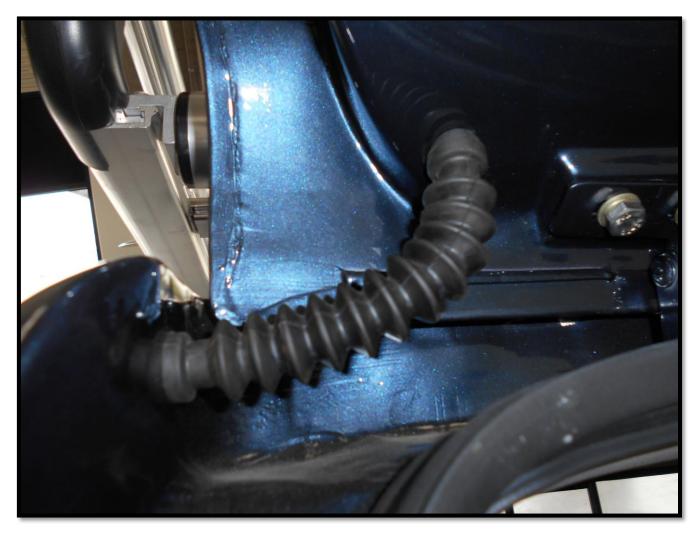




8. Drill two holes in the canopy plate as showed on the pictures.

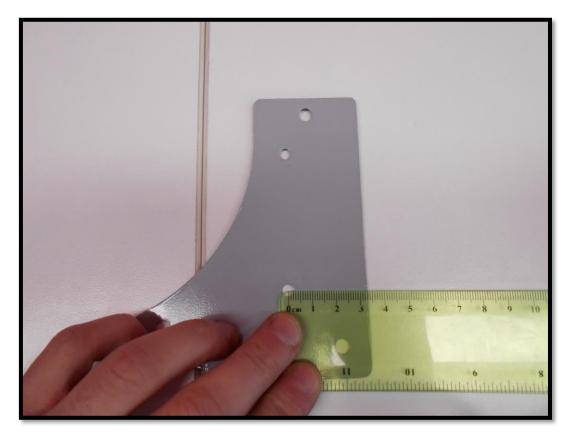

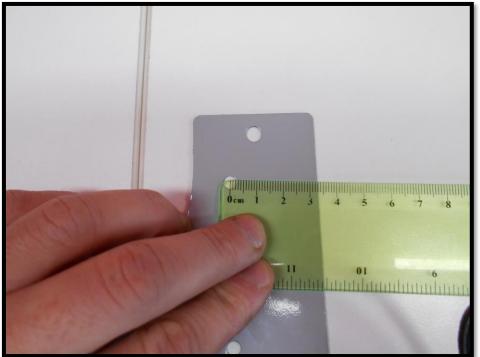




9. Connect rod with central locking mechanism and insert in the rear door.

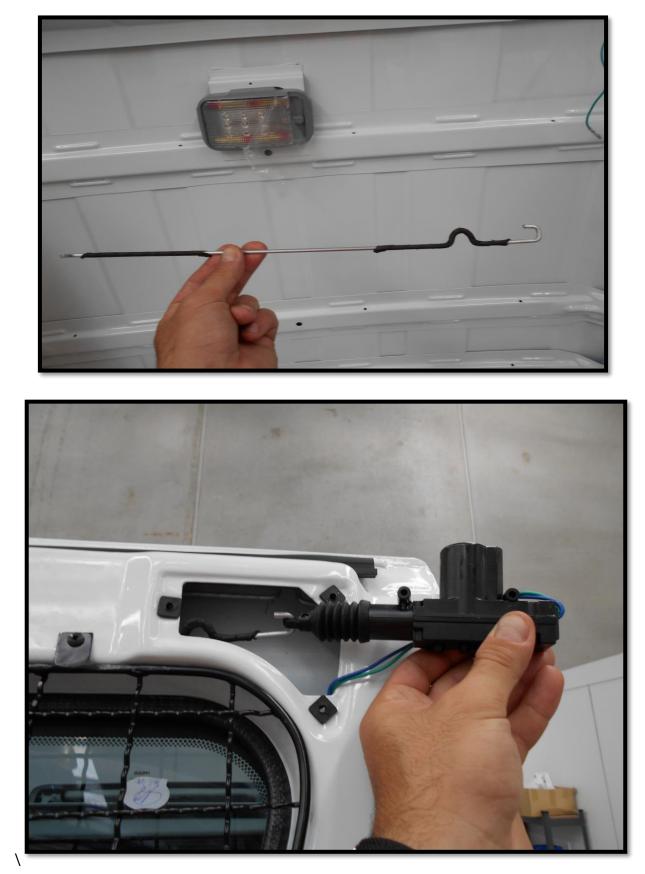



10. Connect rod to the handle

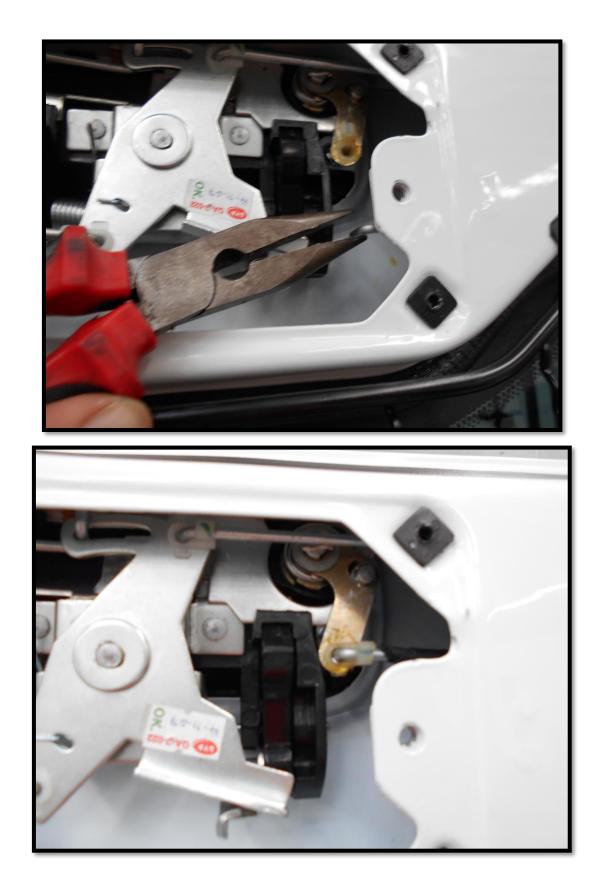



11. Replace the lid on the central locking mechanisms and door handles.

