Note:


Apply WD40 or grease to the moving parts regulary for good performance of the product.

Patent Pending Worldwide





FITTING INSTRUCTION

HOLDEN COLORADO

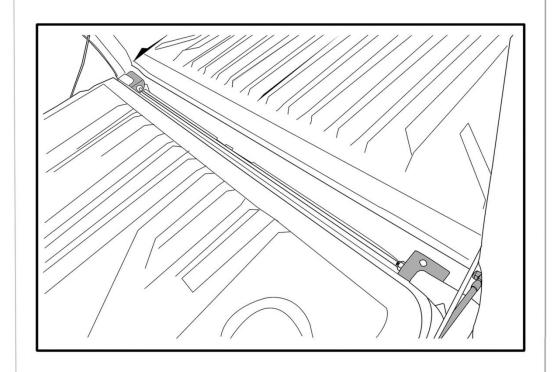


Patent Pending Worldwide

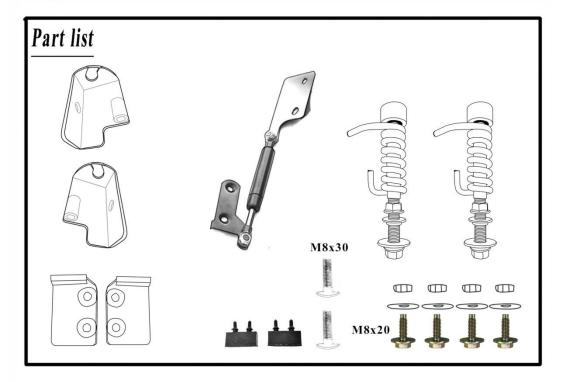

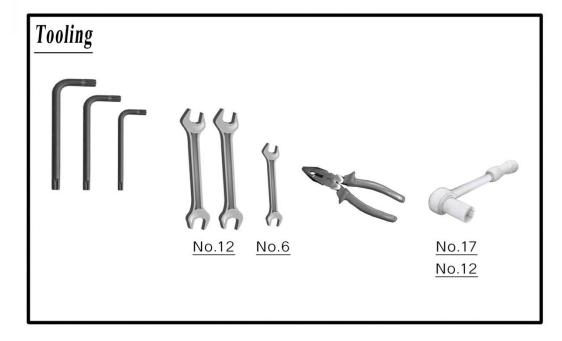




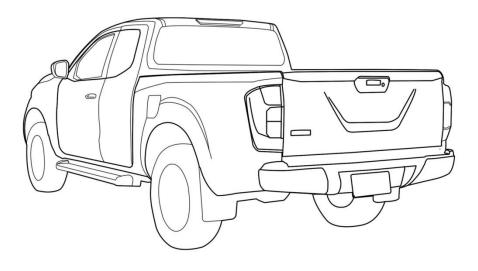


9.put back rear bumper

NOTE: Process #2 - #4 will be done from the bottom of the tailgate while the tailgate in closed position.


1.take off rear bumper

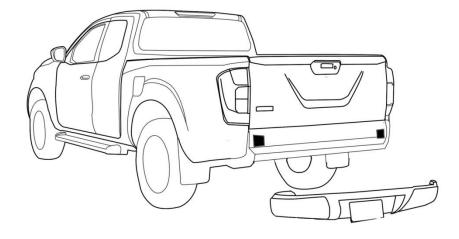


2.un-bolt the truck tailgate bracket

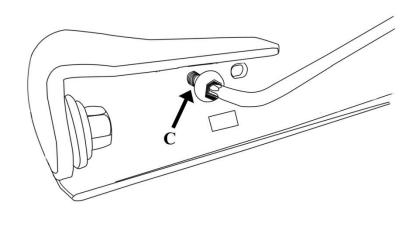


7. Attach damper to the tailgate by putting damper bracket (T) under tailgate sling bracket (U) and tighten together with original bolt (V) (W)

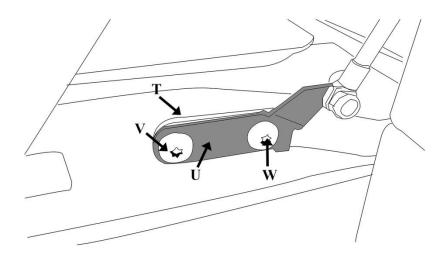


8. Put stopper rubber with tailgate bracket

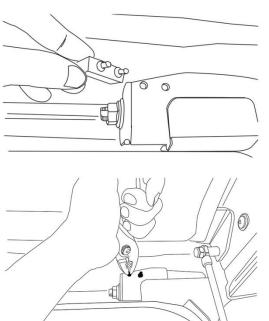


5. Attache spring pushing bracket (O) with the truck using original bolt (P). If the truck has stopping rubber, can put it back through hole (Q)

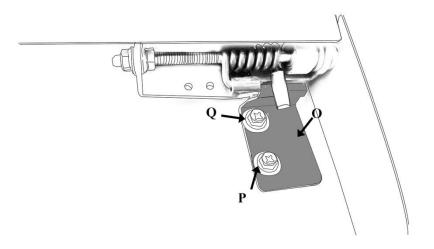


6. Attache damper to the truck using original bolt (R) (S)

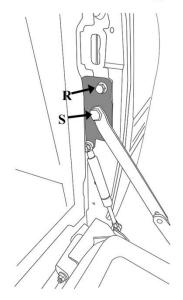


3. Attache tailgate bracket (A) on the truck tailgate bracket (B) change bold JMF M8x30 (C)

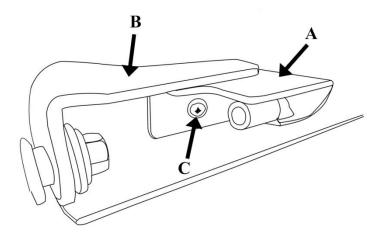


4. Assembly the spring set with tailgate bracket4.1 put spring set with tailgate bracket as below picture

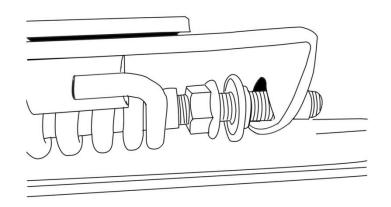

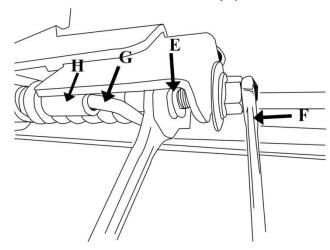

Make sure that the spring end (G) is slided in the bush (H) of the tailgate bracket

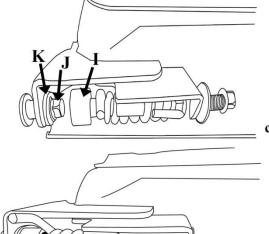

tighten the nut (E) till bush (I)
completely cover the bolt head (J)
and touch the flat washer (K)

