



WIRING INSTRUCTIONS


SMM Steel Canopy V2, V4

MAZDA BT-50

2011+




FUNCTION	CANOPY WIRING	VEHICLE WIRING
Constant Power(Dome Light)	Red	Red
Rear Demister	Yellow/Red	Black
Central Locking(Lock)	Blue	Grey/Brown (Plug A)
Central Locking(Unlock)	Green	Brown/Green (Plug A)
Earth	Black	Body of the car
Brake Light	Red	Green (Plug B)
Earth	Black	Black (Plug B)

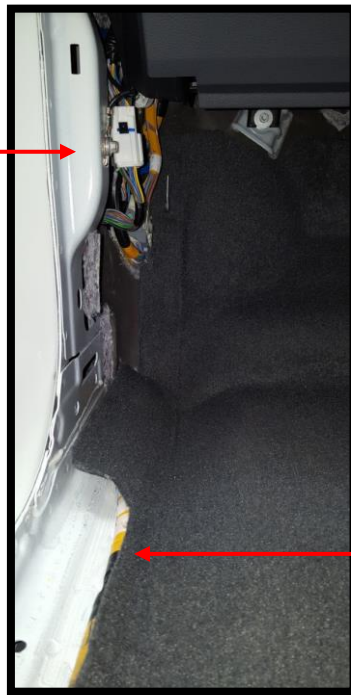

- Plug A is located at the front of the vehicle on the passenger side behind the kick panel.
- Plug B is behind the rear tail light
- The rest of the connections are under the underneath the floor kick panel.


Plug A.

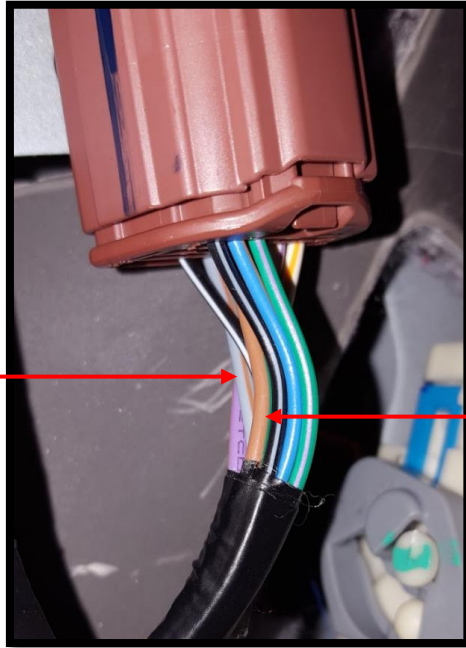

Blue to Grey/Brown (Central Locking- Lock)

Green to Brown/Green (Central Locking- Unlock)

Connections under floor kick panel.

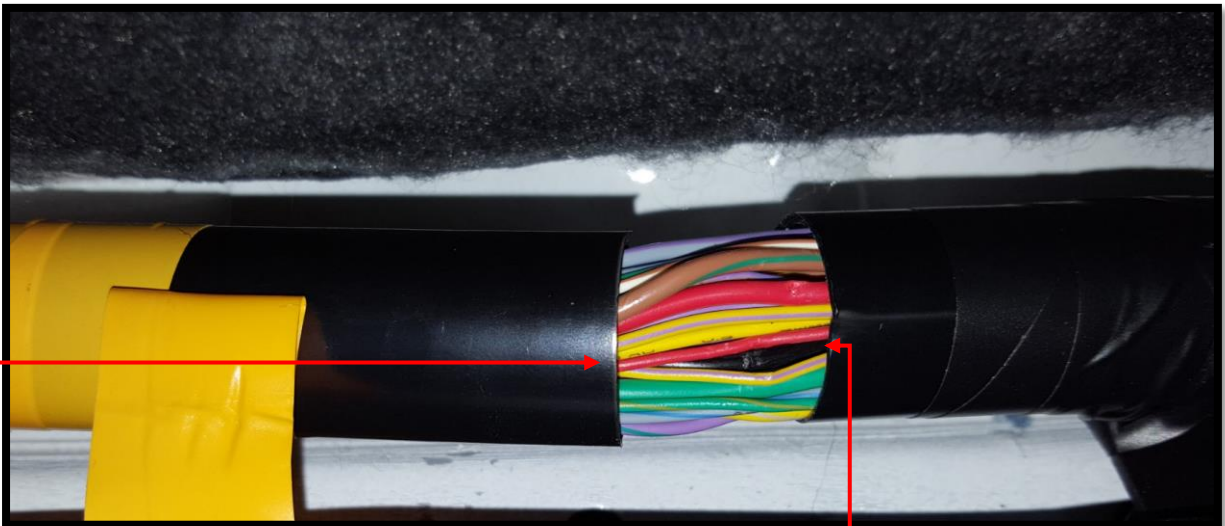


Red to thin Red (Constant Power-Dome light)

Yellow/Red to Black (Rear Demister)

Black to Body of the car (Earth)

Plug B

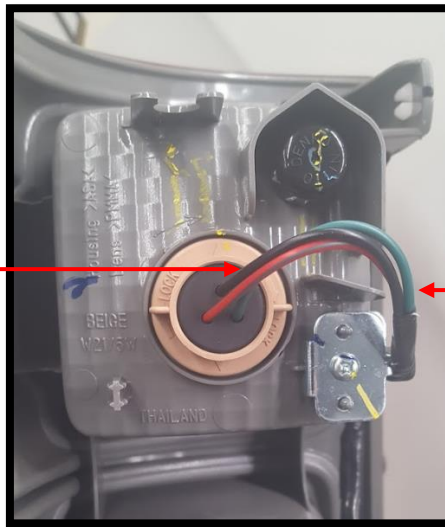

Red to Green (Brake Light)

Black to Black (Earth)

Running the loom

You will find an opening with a grommet sealing it under the passenger seat to run the loom out under the vehicle. Then run the loom to the rear of the vehicle behind the tail light.



PLEASE NOTE

- Avoid drilling holes in the vehicle. There are always openings into the cabin underneath the vehicle or at the rear.
- Using a L.E.D test light, test all electrical components of the vehicle before and after wiring the canopy to ensure that everything works correctly.
- Ensure you replace all vehicle trim and return the vehicle interior back to how it was found.